





CNC Fixture and Setup

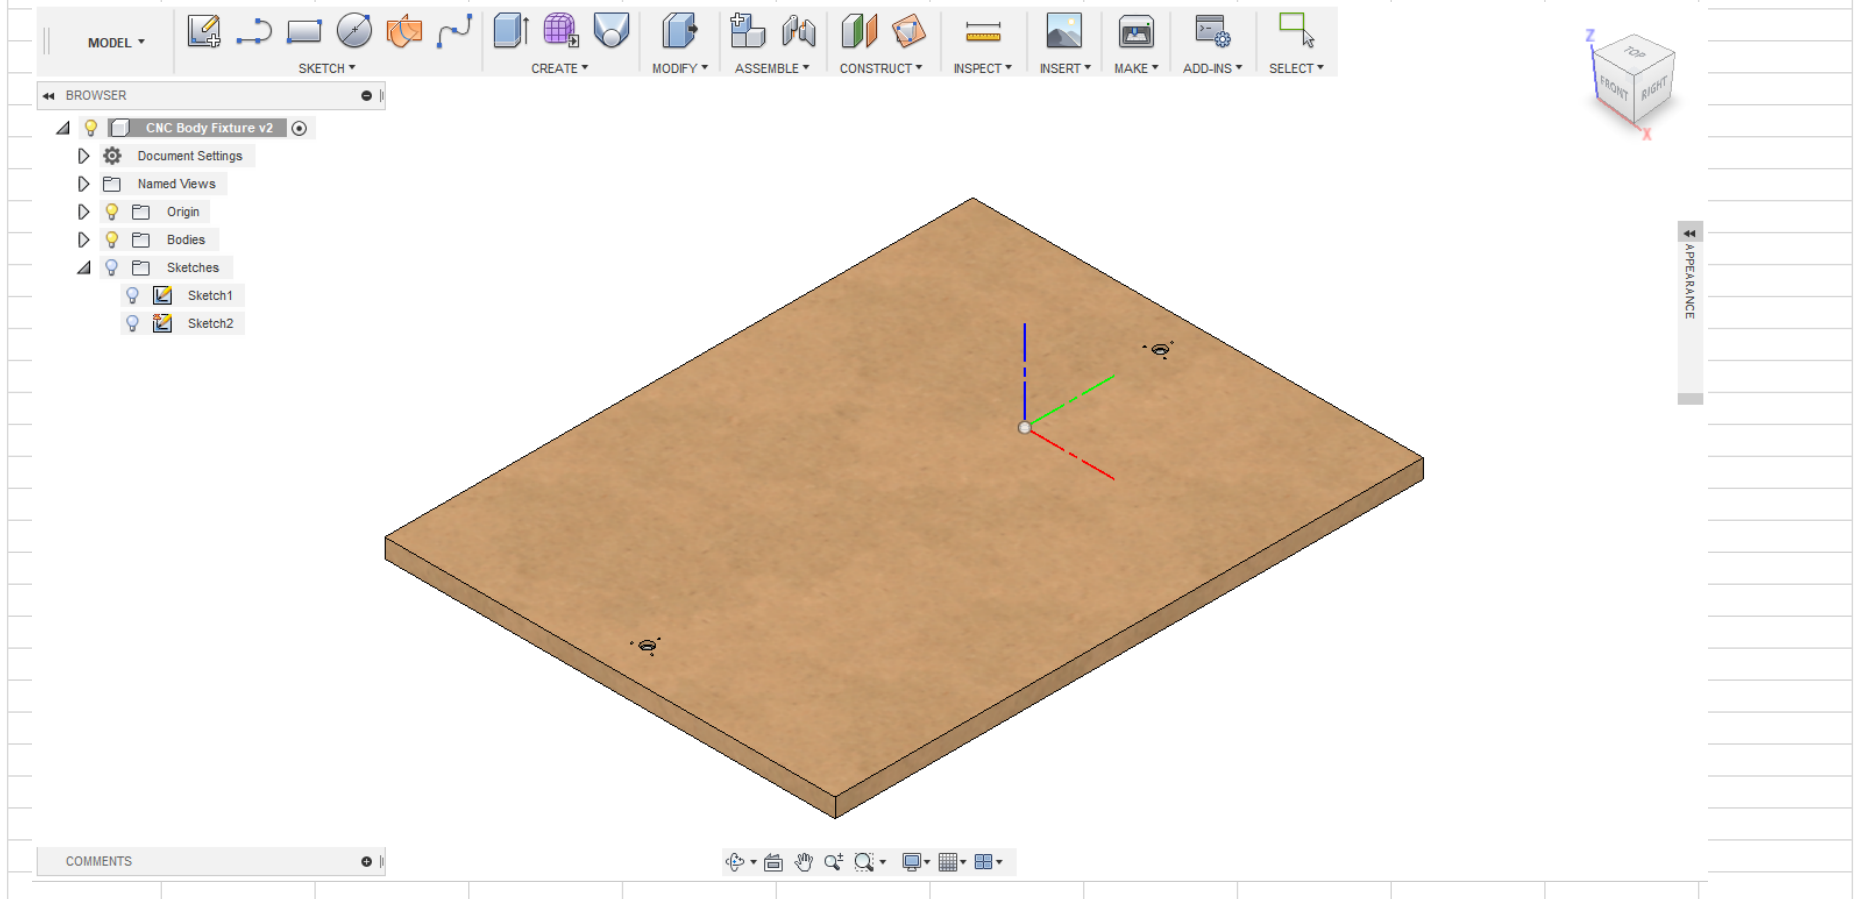


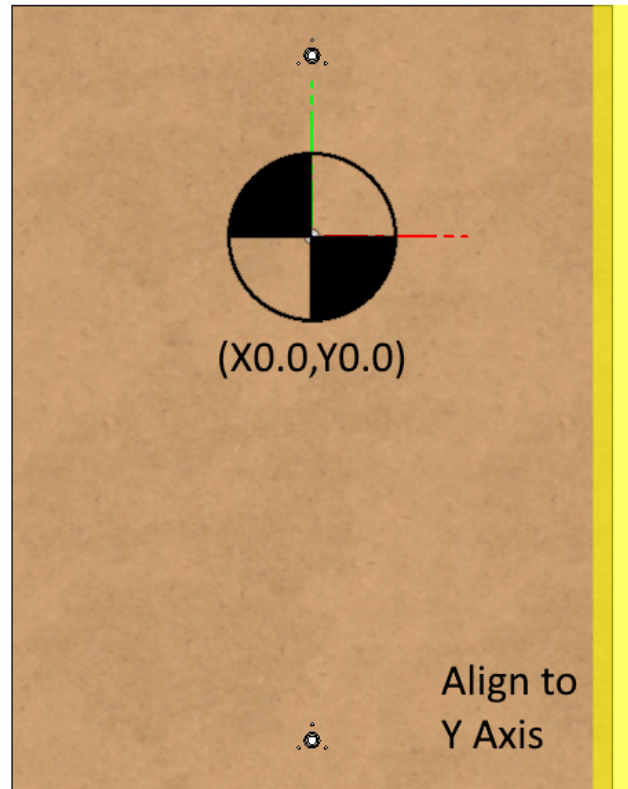

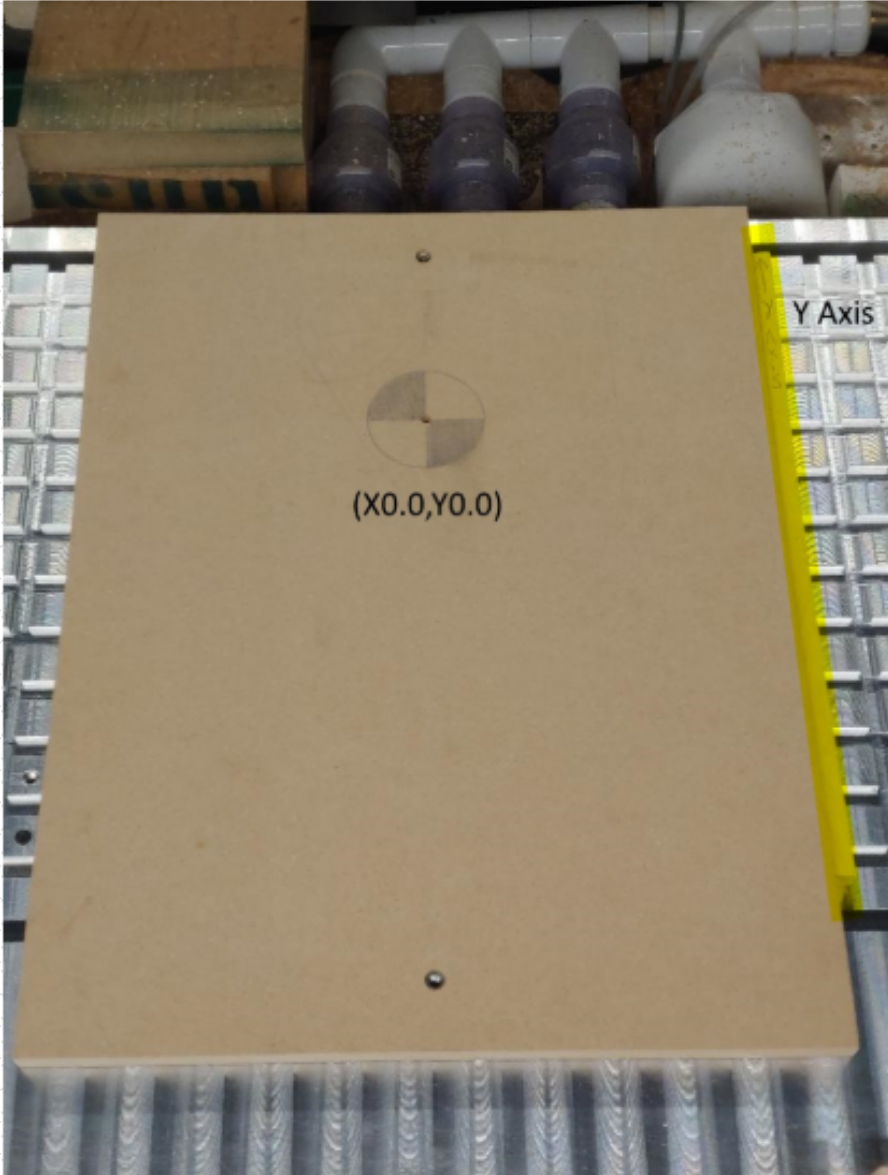




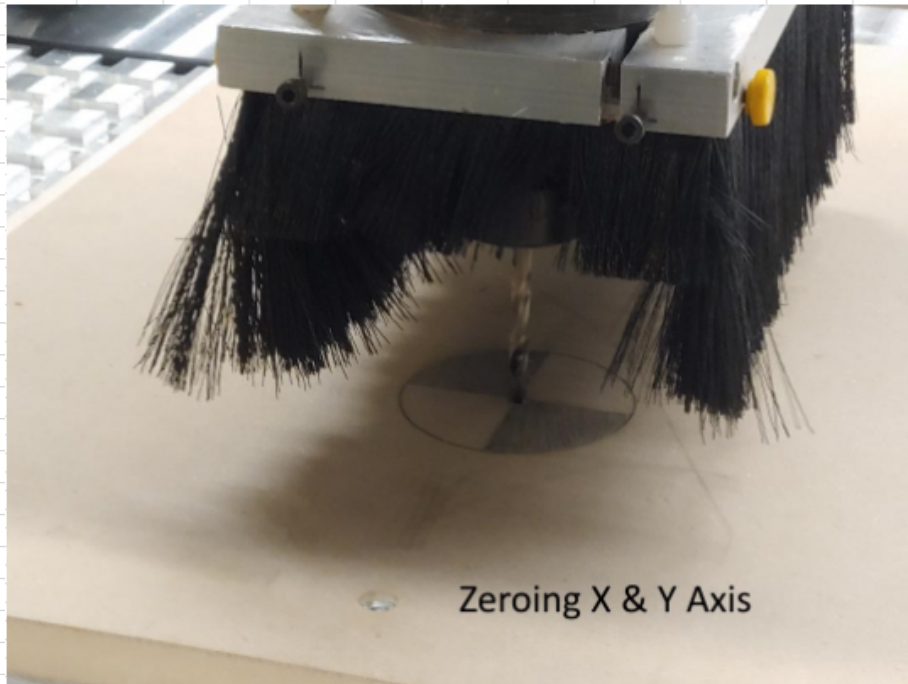

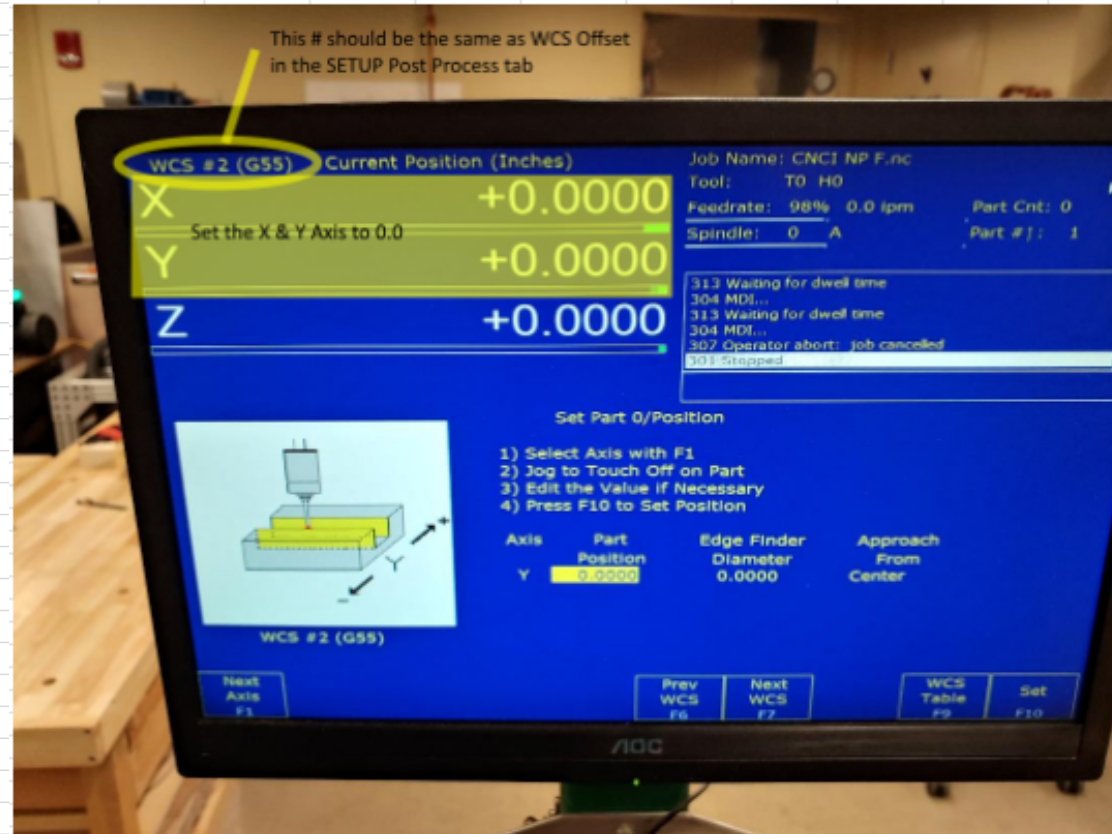





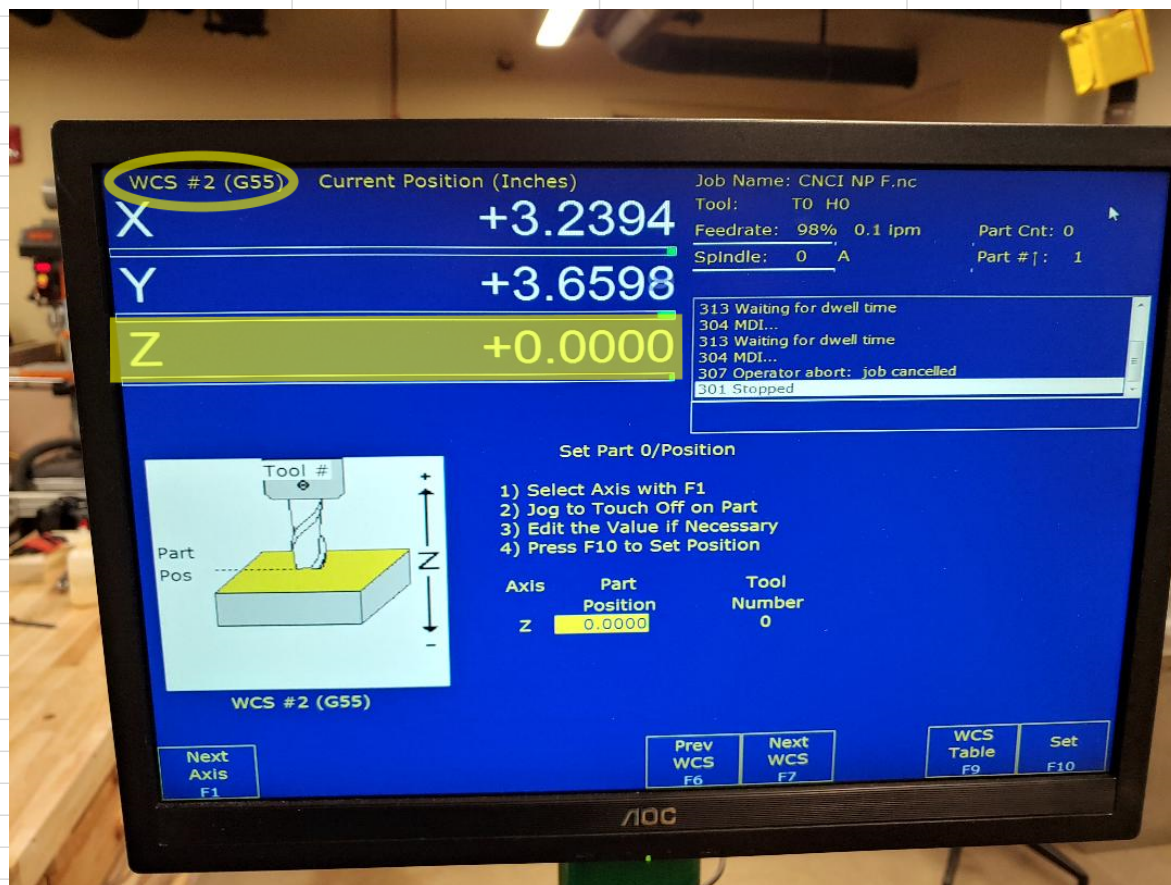

- 1 Attach Fixture aligned with Y axis
 - 2 Zero X&Y values IN CORRECT WCS
 - 3 Bolt body to fixture
 - 4 Zero Z axis on top of body
 - 5 Ensure tool height is sufficient, greater than 2.1 inches for 1/4" Endmill
 - 6 Load NC file
- RUN IT!