


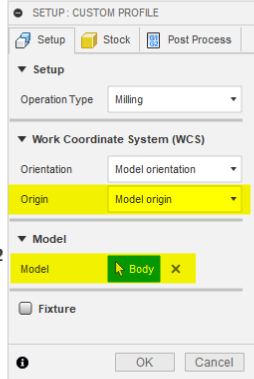
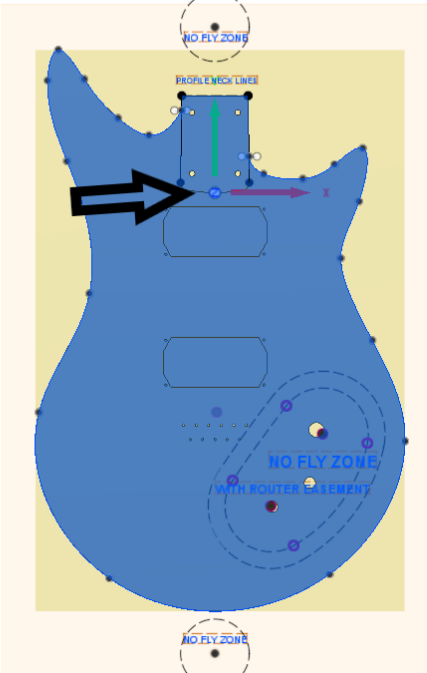


SETUP of Stock and profile

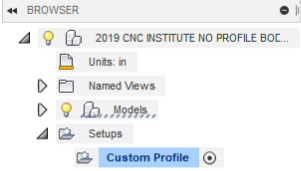


No Profile



BROWSER

- 2019 CNC INSTITUTE NO PROFILE BO...
- Units: in
- Named Views
- Models
- Setups
 - Custom Profile

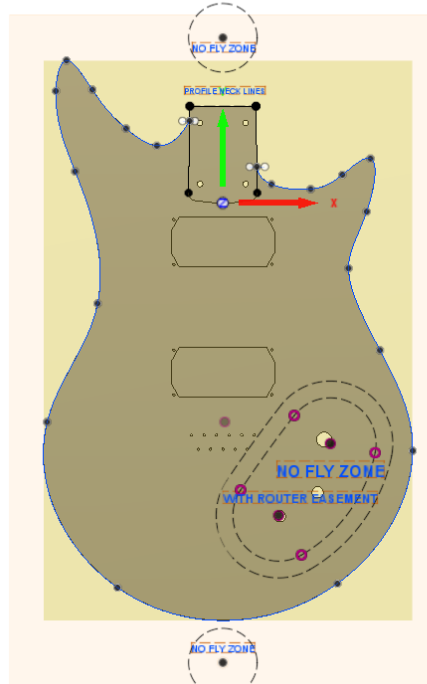

3

● SETUP: CUSTOM PROFILE

Setup Stock Post Process

▼ Stock

Mode Relative size box

Stock Offset Mode No additional stock


▼ Dimensions

Width (X)	12.1274 in
Depth (Y)	18.3777 in
Height (Z)	1.75 in

OK Cancel


COMMENTS





BROWSER

- 2019 CNC INSTITUTE NO PROFILE BOC...
- Units: in
- Named Views
- Models
- Setups
 - Custom Profile

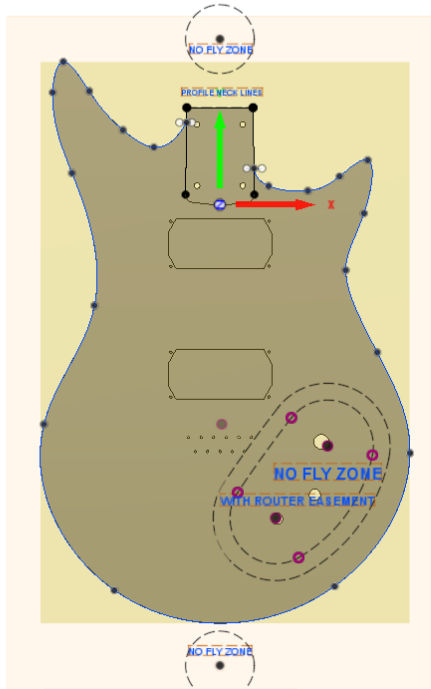

SETUP: CUSTOM PROFILE

Setup Stock Post Process

Program

Program Name/Number: 1

Program Comment: Custom Profile

Machine WCS

WCS Offset: 2

Multiple WCS Offsets:

OK Cancel

COMMENTS

Notes:

WCS Offset may not be needed Explain when and why

Highlight Manufacture tab

Highlight Create Setup button

Highlight Model origin on body

Highlight setup tabs

Highlight Maybes a different color?

Number steps on checklist and pictures??

SETUP: Profile

Setup

Stock

Post Process

1 Origin [Model Orig

3 Stock Offset Mode [No Additional €

4 Program Comment [Your Name Here]

2 [] Model

5 WCS [2] May not be needed

Body